



Bell Forklift, Inc.

**BASIC
PM**



To sign up for this service or find out more about Bell's many other parts and service offerings, call 1-888-404-2575.

Basic PM Service (Planned Maintenance)

* Prices Vary Per Model

INCLUDES:

- Change oil and filter
- Lubricate chassis, mast and carriage
- Check steering axle
- Oil breather caps
- Check fan and alternator belts
- Check transmission level and check for leaks
- Check battery water level
- Check battery cables
- Check brake fluid level
- Check brake pedal freeplay and pad
- Check handbrake operation
- Check hydraulic oil level
- Check inching adjustment
- Check clutch adjustment
- Check all gauges and horn
- Inspect all hydraulic lines
- Inspect mast and carriage for unusual wear
- Inspect air cleaner and hoses
- Check "water", radiator cap., antifreeze and check hoses
- Check differential level and planetary hub level
- Inspect tires and lights
- Inspect lift chains
- Inspect fork latches
- Check neutral start switch

Available on all makes of lift trucks
Contact your local rep or branch for pricing

4 SERVICE CENTERS TO BETTER SERVE YOU

Clinton Township
34660 Centaur
Clinton Twp., MI
48035
586-415-5200
Fax: 586-415-5203

Novi
46400 Grand River Ave.
Novi, MI
48374
248-348-7373
Fax: 248-348-5009

Detroit
13700 Mellon
Detroit, MI
48217
313-841-1220
Fax: 313-841-1848

Flint/Saginaw
4265 W. Mt. Morris Rd.
Mt. Morris, MI
48458
810-687-7600
Fax: 810-687-1515

www.bellforklift.com - Sales: 888-404-2575